

Codes in the **USED ON** column indicate the valve each part is used on as described in the following table.

CODE	VALVE	VALVE DESCRIPTION
A	T68A	2-Port/2-Position, no exhaust, black handle, locks open and closed.
B	T68C	3-Port/2-Position, unthreaded exhaust, black handle, locks open and closed.
C	T68E	3-Port/2-Position, unthreaded exhaust, yellow handle, locks closed only.
D	T68H	3-Port/2-Position, threaded exhaust, black handle, locks open and closed.
Blank	All valves	

ITEM	DESCRIPTION	PART NO.	USED QTY	ON
1	Screw	5807-02	2	
2	Nut	5801-02	2	
3	O-ring (T68 service kit item)	229005-126	1	
4	Screw	5806-01	2	
5	End connector	Not normally replaced	1	
6	O-ring (T68 service kit item)	2305-96	2	
7	Seat (T68 service kit item)	126285-125	2	
8	Ball, non-exhausting	126094-1251	1	A
	Ball, exhausting	126284-125	1	BCD
9	Body	Not normally replaced	1	
10	Locking ring, locks open and closed	5280-99	1	ABD
	Locking ring, locks closed only	5280-95	1	C
11	Chain	5280-98	1	
12	Nut (T68 service kit item)	607002-3724	1	
13	T-handle, black	5816-01	1	ABD
	T-handle, yellow	5816-99	1	C
14	Gland (T68 service kit item)	168009-3	1	
15	Stem seal (T68 service kit item)	162015-3	1	
16	Valve stem	168013-00	1	
17	Thrust bearing (T68 service kit item)	126165-4	1	

ADDITIONAL PARTS USED WITH IN-LINE MOUNTED T68 SHUT-OFF VALVES

18	Screw	5807-06	2	
19	Nut	5801-02	2	
20	Spacer	5278-92	2	
21	End connector	Not normally replaced	1	
22	Spacer plate	5278-93	1	
23	O-ring	2305-28	1	

SERVICE KITS & ACCESSORIES

T68 Service kit - includes items circled on exploded view	4384-310
---	----------

