

In the following parts list, assemblies are printed in capital letters. Parts that are included with an assembly are listed and indented directly beneath it. When an assembly is ordered, the assembly and all parts indented beneath it are included in the shipment.

ITEM	DESCRIPTION	PART NO.	QTY
1	BONNET ASSY (current models)	2950-11	1
2	• Knob, adjusting	2951-72	1
3	• Bonnet	2950-86	1
4	• SCREW ASSY, adjusting	2954-55	1
5	• • Nut, pressure	2953-05	1
5A	Bonnet (early models)	Replaced by item 1	1
6	Spring, regulating, 0,1 to 0,7 bar (1 to 10 psig)	2069-02	1
	Spring, regulating, 0,3 to 3,5 bar (5 to 50 psig)	613-03	1
	Spring, regulating, 0,3 to 7 bar (5 to 100 psig)	2960-04	1
7	Spring rest (service kit item)	600-89	1
8	Slip ring (service kit item)	615-01	1
9	Diaphragm (service kit item)	3440-03	1
10	VALVE SEAT ASSY (current models) (service kit item) *	3439-14	1
11	• O-ring (current models) (service kit item) *	1741-01	1
12	Valve seat (early models) (service kit item) *	3439-89	1
13	Gasket, (early models) (service kit item) *	1956-05	1
14	Body (early models)	Not normally replaced	1
15	Body (current models)	Not normally replaced	1
16	Plug, pipe, 1/8 PTF (service kit item)	2338-08	2
	Plug, pipe, ISO Rc 1/8 (service kit item)	2338-99	2
17	Gage, pressure, 1/8 PTF, 2 bar (30 psig)	18-013-214	1
	Gage, pressure, 1/8 PTF, 4 bar (60 psig)	18-013-211	1
	Gage, pressure, 1/8 PTF, 10 bar (150 psig)	18-013-212	1
	Gage, pressure, ISO R1/8, 4 bar (60 psig)	18-013-990	1
	Gage, pressure, ISO R1/8, 10 bar (150 psig)	18-013-989	1
	Gage, pressure, ISO R1/8, 25 bar (300 psig)	18-013-908	1

SERVICE KITS & ACCESSORIES

Service kit (items circled on exploded view)	3407-80
Valve seat kit (items 10, 11, 12, 13) *	3439-11
Kit, pipe plug, 1/8 PTF - item 24 - contains two	3723-01
Kit, pipe plug, ISO R1/8 - item 24 - contains two	3723-06
Wall mounting bracket	5095-17
Wall mounting bracket & plastic panel nut	18-025-003
Plastic panel nut	2962-89
Metal panel nut	2962-04
Tamper resistant locking screw and adjusting knob (current models)	18-001-094
Tamper resistant locking screw (current models)	6097-08
Tamper resistant seal wire (early models)	2117-01

* Valve seat kit contains early and current valve seats (10, 12) and seals (11, 13). Replace used seat and seal with identical parts from the kit. Use valve seat & o-ring (10, 11) only in body style 15. Use valve seat & gasket (12, 13) only in body style 14.

