

In the following parts list, assemblies are printed in capital letters. Parts that are included with an assembly are listed and indented directly beneath it. When an assembly is ordered, the assembly and all parts indented beneath it are included in the shipment.

When an assembly lists a letter code in the **USED ON** column, parts that list the same letter code are used in that assembly. Parts coded **A** are used in the Assembly coded **A**, parts coded **B** are used in the Assembly coded **B**, etc.

ITEM	DESCRIPTION	PART NO.	QTY	USED ON
1	BONNET ASSY (current models).....	2950-10	1	
2	• Knob, adjusting.....	2951-70	1	
3	• Bonnet.....	2950-86	1	
4	• SCREW ASSY, adjusting.....	2954-55	1	
5	• • Nut, pressure.....	2953-05	1	
5A	Bonnet (early models).....	Replaced by item 1	1	
6	Spring, regulating, 0,1 to 0,7 bar (1 to 10 psig).....	2069-02	1	
	Spring, regulating, 0,3 to 3,5 bar (5 to 50 psig).....	613-03	1	
	Spring, regulating, 0,3 to 7 bar (5 to 100 psig).....	2960-04	1	
7	Slip ring (service kit item).....	615-01	1	
8	Diaphragm, relieving (service kit item).....	3412-30	1	
	Diaphragm, non-relieving (service kit item).....	3412-31	1	
9	VALVE SEAT ASSY (early models) (service kit item) *.....	3402-50	1	
10	• Seal, (early models) (service kit item) *.....	1956-05	1	
11	VALVE SEAT ASSY, (current models) (service kit item)**.....	3402-57	1	
12	• O-ring, (current models) (service kit item)**.....	1741-01	1	
13	Valve (service kit item).....	2959-50	1	
14	Spring, valve (service kit item).....	2799-01	1	
15	Body (early models).....	Not normally replaced	1	
16	Body (current models).....	Not normally replaced	1	
17	Plug, pipe, 1/8 PTF (service kit item).....	2338-08	2	
	Plug, pipe, ISO Rc 1/8 (service kit item).....	2338-99	2	
18	Gage, pressure, 1/8 PTF, 2 bar (30 psig).....	18-013-214	1	
	Gage, pressure, 1/8 PTF, 4 bar (60 psig).....	18-013-211	1	
	Gage, pressure, 1/8 PTF, 10 bar (150 psig).....	18-013-212	1	
	Gage, pressure, ISO R1/8, 4 bar (60 psig).....	18-013-990	1	
	Gage, pressure, ISO R1/8, 10 bar (150 psig).....	18-013-989	1	
	Gage, pressure, ISO R1/8, 25 bar (300 psig).....	18-013-908	1	
19	PLASTIC BOWL ASSY, manual drain.....	3646-53	1	A
19	PLASTIC BOWL ASSY, automatic drain.....	3646-51	1	B
20	• Valve, manual drain.....	773-03	1	A
21	• AUTOMATIC DRAIN ASSY.....	3654-02	1	B
22	• • O-ring, auto drain.....	Order item 21	1	B
23	• Bowl, plastic.....	Not normally replaced	1	AB
24	• O-ring (service kit item) †.....	2315-23	1	AB
25	METAL BOWL ASSY, manual drain.....	3647-62	1	C
25	METAL BOWL ASSY, automatic drain.....	3647-68	1	D
26	• Valve, manual drain.....	773-03	1	C
27	• AUTOMATIC DRAIN ASSY.....	3654-02	1	D
28	• • O-ring, auto drain.....	Order item 27	1	D
29	• Bowl, metal.....	Not normally replaced	1	CD
30	• O-ring (service kit item) †.....	2315-23	1	CD
31	ELEMENT ASSY (service kit item).....	665-75	1	
32	• O-ring (service kit item).....	422-01	1	

#### SERVICE KITS & ACCESSORIES

Service kit - includes items circled on exploded view.

Relieving.....	3407-66
Non-relieving.....	3407-65
Element kit - items 24, 30, 31, 32.....	4141-10
Kit, pipe plug, 1/8 PTF - item 17 - contains two.....	3723-01
Kit, pipe plug, ISO R1/8 - item 17 - contains two.....	3723-06
Wall mounting bracket.....	5095-17
Wall mounting bracket & plastic panel nut.....	18-025-003
Plastic panel nut.....	2962-89
Metal panel nut.....	2962-04
Tamper resistant locking screw and adjusting knob (current models).....	18-001-092
Tamper resistant locking screw (current models).....	6097-08
Tamper resistant seal wire (early models).....	2117-01

\* Use valve seat (9) and seal (10) with early body (15).

\*\* Use valve seat (11) and o-ring (12) only with current body (16).

† Current bowls use a lip on the bowl ID to retain bowl o-ring. Early bowls had a lip on the bowl OD and used a larger o-ring. Order o-ring 2315-24 for early bowls

