

In the following parts list, assemblies are printed in capital letters. Parts that are included with an assembly are listed and indented directly beneath it. When an assembly is ordered, the assembly and all parts indented beneath it are included in the shipment.

ITEM QTY	DESCRIPTION	PART NO.	
1	Knob, adjusting.....	4207-89	1
2	Screw	9PM4-13	4
3	Bonnet	4205-89	1
4	Washer, thrust	5183-05	1
5	Screw, adjusting	4230-50	1
6	PLASTIC BONNET ASSY, T-bar adjustment	4205-50	1
7	• T-bar and lock nut.....	4243-50	1
8	• • Nut.....	5819-02	1
9	• Screw	9PM4-13	4
10	• Bonnet	Not available separately	1
11	• Spring rest	4247-89	1
12	Spring, regulating, 30 psig (2 bar).....	4232-01	1
	Spring, regulating, 60 psig (4 bar).....	4232-02	1
	Spring, regulating, 150 psig (10 bar).....	4232-03	1
13	Diaphragm, Relieving.....	4209-50	1
	Diaphragm, Non relieving.....	4209-51	1
14	Plug, pipe, 1/8 PTF	2338-08	1
	Plug, pipe, ISO R1/8	2338-99	1
15	Gauge, pressure, 1/8 PTF, 60 psig (4 bar)	18-013-225	1
	Gauge, pressure, ISO R1/8, 4 bar	18-013-025	1
	Gauge, pressure, ISO R1/8, 10 bar	18-013-027	1
16	Plug, bottom	4227-89	1
17	O-ring	4273-01	1
18	Cover, bottom	4236-89	1
19	Spring, valve.....	4239-02	1
20	VALVE ASSY.....	4235-50	1
21	• O-ring.....	521-99	1
22	O-ring	421-01	1
23	Body	Not normally replaced	1

SERVICE KITS & ACCESSORIES

Service kit, relieving- items 13, 17, 19, 20, 21, 22	4381-500
Service kit, non relieving- items 13, 17, 19, 20, 21, 22	4381-501
Kit, pipe plug, 1/8 PTF - item 14, contains two.....	3723-01
Kit, pipe plug, ISO R1/8 - item 14, contains two.....	3723-06
Wall mounting bracket kit.....	4224-50
Panel nut.....	4248-89
Tamper resistant shroud and seal wire (use only with knob adjustment).....	4255-51

