

In the following parts list, assemblies are printed in capital letters. Parts that are included with an assembly are listed and indented directly beneath it. When an assembly is ordered, the assembly and all parts indented beneath it are included in the shipment.

ITEM	DESCRIPTION	PART NO.	QTY
1	Knob, adjusting.....	4207-88	1
2	Screw .....	9PM4-14	4
3	Bonnet.....	4205-89	1
4	Washer, thrust.....	5183-05	1
5	Screw, adjusting .....	4230-50	1
6	PLASTIC BONNET ASSY, T-bar adjustment .....	4205-50	1
7	• T-bar and lock nut.....	4243-50	1
8	• Nut.....	5819-02	1
9	• Screw .....	9PM4-13	4
10	• Bonnet .....	Not available separately	1
11	• Spring rest .....	4247-89	1
12	Spring, regulating, 30 psig (2 bar).....	4232-01	1
	Spring, regulating, 60 psig (4 bar).....	4232-02	1
	Spring, regulating, 150 psig (10 bar).....	4232-03	1
13	Spring rest, lower .....	4249-88	1
14	Diaphragm.....	4209-03	1
15	Plug, pipe, 1/8 PTF (service kit item).....	2338-08	2
	Plug, pipe, ISO R1/8 (service kit item).....	2338-99	2
16	Gauge, pressure, 1/8 PTF, 60 psig (4 bar) .....	18-013-211	1
	Gauge, pressure, 1/8 PTF, 150 psig (10 bar) .....	18-013-212	1
	Gauge, pressure, ISO R1/8, 4 bar .....	18-013-990	1
	Gauge, pressure, ISO R1/8, 10 bar .....	18-013-989	1
17	Cover, bottom.....	4236-89	1
18	Body .....	Not normally replaced	1

**SERVICE KITS & ACCESSORIES**

Kit, pipe plug, 1/8 PTF - item 15, contains two.....	3723-01
Kit, pipe plug, ISO R1/8 - item 15, contains two.....	3723-06
Wall mounting bracket kit.....	4224-50
Panel nut .....	4248-89
Tamper resistant shroud and seal wire (use only with knob adjustment).....	4255-51

