

In the following parts list, assemblies are printed in capital letters. Parts that are included with an assembly are listed and indented directly beneath it. When an assembly is ordered, the assembly and all parts indented beneath it are included in the shipment.

ITEM	DESCRIPTION	PART NO.	QTY.
1	Knob, adjusting.....	4307-89	1
2	Screw	74618-12	4
3	Bonnet.....	74601-89	1
4	Adjusting screw	4330-50	1
5	T-HANDLE ASSEMBLY.....		1
6	• T-handle, adjusting	1094-03	1
7	• Lock nut	1305-01	1
8	• Screw	74618-12	4
9	• Bonnet.....(Not available - order item 5)		1
10	• Upper spring rest	5297-88	1
11	Spring, regulating		
	(0 to 4 bar) (0 to 58 psig)	4332-01	1
	(0 to 10 bar) 0 to 145 psig)	4332-02	1
	(0 to 16 bar) (0 to 232 psig)	4332-03	1
12	Diaphragm		
	Relieving.....	4309-50	1
	Non-relieving	4309-51	1
13	Body.....(non replaceable part)		
14	Pipe plug		
	R1/8.....	2338-99	2
	1/8 NPTF.....	2891-85	2
15	O-ring, ports.....	74248-11	2
16	Plug, bottom	4327-89	1
17	O-ring, bottom plug	2306-23	1
18	Spring, valve.....	5205-05	1
19	VALVE ASSEMBLY	4308-60	1
20	• O-ring.....	421-01	1

SERVICE KITS & ACCESSORIES

Service kit, relieving - Items 12, 15, 17, 18, 19, 20.....	4381-200
Service kit, nonrelieving - Items 12, 15, 17, 18, 19, 20.....	4381-201
Kit, pipe plug, 1/8 PTF - item 15 - contains two.....	3724-05
Kit, pipe plug, ISO R1/8 - item 15 - contains two.....	3723-06
Wall mounting bracket kit	43504-50
Panel mount nut	4348-89
Tamper resistant cover and seal wire (use only with knob adjustment).....	4355-51

