

In the following parts list, assemblies are printed in capital letters. Parts that are included with an assembly are listed and indented directly beneath it. When an assembly is ordered, the assembly and all parts indented beneath it are included in the shipment.

| ITEM                                                | DESCRIPTION                                                                        | PART NO.              | QTY |
|-----------------------------------------------------|------------------------------------------------------------------------------------|-----------------------|-----|
| 1                                                   | Panel mounting ring .....                                                          | 5988-02               | 1   |
| 2                                                   | Adjusting screw .....                                                              | 5973-99               | 1   |
| 3                                                   | Lock nut .....                                                                     | 5819-99               | 1   |
| 4                                                   | Screws:<br>base and bonnet assembly .....                                          | 5987-97               | 8   |
|                                                     | bowl assembly.....                                                                 | 5987-98               | 4   |
| 5                                                   | Bonnet .....                                                                       | 5955-96               | 1   |
| 6                                                   | Upper spring rest:<br>2, 4 and 7 bar .....                                         | 5965-98               | 1   |
|                                                     | 10 bar .....                                                                       | 5965-97               | 1   |
| 7                                                   | Spring:<br>2 bar .....                                                             | 5962-99               | 1   |
|                                                     | 4 bar .....                                                                        | 5964-99               | 1   |
|                                                     | 7 bar .....                                                                        | 5967-99               | 1   |
|                                                     | 10 bar .....                                                                       | 5966-99               | 1   |
| 8                                                   | Diaphragm assembly (nitrile and stainless steel):<br>relieving type<br>2 bar ..... | 5954-99               | 1   |
|                                                     | 4 and 7 bar .....                                                                  | 74036-52              | 1   |
|                                                     | non-relieving type<br>2 bar .....                                                  | 5954-97               | 1   |
|                                                     | 4 and 7 bar .....                                                                  | 5954-96               | 1   |
| Item 9 is not used in this parts list               |                                                                                    |                       |     |
| 10                                                  | Base .....                                                                         | 5960-89               | 1   |
| Items 11 through 15 are not used in this parts list |                                                                                    |                       |     |
| 16                                                  | O-ring, base (nitrile) .....                                                       | 2306-36               | 1   |
| Items 17 through 21 are not used in this parts list |                                                                                    |                       |     |
| 22                                                  | Body (aluminium)* .....                                                            | Not normally replaced | 1   |
| 23                                                  | O-ring, diaphragm insert (nitrile) .....                                           | 2305-32               | 1   |
| 24                                                  | Valve cap .....                                                                    | 5958-01               | 1   |
| 25                                                  | Valve seat .....                                                                   | 5957-01               | 1   |
| 26                                                  | O-ring, valve seat (nitrile) .....                                                 | 2820-99               | 1   |
| 27                                                  | Valve .....                                                                        | 5956-89               | 1   |
| 28                                                  | Valve spring .....                                                                 | 5959-02               | 1   |
| 29                                                  | Pipe plugs .....                                                                   | 2891-197              | 2   |

\* Specify inlet and gauge port threads.

#### SERVICE KIT (standard option)

Regulator section service kit (for aluminium and stainless steel units)

##### Relieving type

- 2 bar - items 4, 8, 27, and 28 .....R38-100R  
7 and 4 bar - items 4, 8, 27, and 28 .....R38-101R

##### Non-relieving type

- 2 bar - items 4, 8, 27, and 28 .....R38-100NR  
7 and 4 bar - items 4, 8, 27, and 28 .....R38-101NR

