

In the following parts list, assemblies are printed in capital letters. Parts that are included with an assembly are listed and indented directly beneath it. When an assembly is ordered, the assembly and all parts indented beneath it are included in the shipment.

ITEM	DESCRIPTION	PART NO.	QTY
1	Screw	6032-12	12
2	Top plate, solenoid mounting	4278-14	1
Items 3 to 8 not used on this assembly			
9	Tamper resistant plug	74562-01	1
10	Flow adjuster	74551-01	1
11	O-ring, flow adjuster	706-01	1
12	Gasket, top plate	4282-06	1
13	Body	Not normally replaced	1
Item 14 not used on this assembly			
15	Plug, 1/16 - 27 NPTF	2891-99	1
16	Exhaust bottom plate	4277-10	1
17	Gasket, bottom plate	4282-07	1
18	Spring, main valve	4283-01	1
19	10 mm single acting seal	74542-10	1
20	Soft start valve, moulded	4280-89	1

**SERVICE KITS & ACCESSORIES**

Service kit - items 9, 11, 12, 17, 19, 20	4384-520
---	----------

